


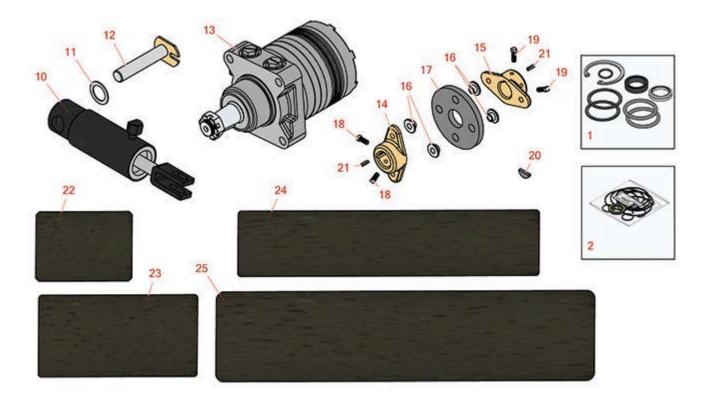

Traction Unit - Model 04345 Hydraulic Motor & Cylinder







Traction Unit - Model 04345 Hydraulic Motor & Cylinder

	R&R Part No.	OEM Part No.	Description	Qty Req	Order Quantity
Overl	haul Kits				
1	R83-7000SK	56-3810, 56-3820, 70-2790, 83-7250, 86-5260, 86-5360	Seal Kit - Fits R83-7000 Cylinder	1	
	Detail Description cylinder:	n: Includes Seals, O-ƙ	Rings & 1 ea: R43-5220 Retaining Ring to rebuild	one	
1	R63-9500SK		Seal Kit - Fits R63-9500 Cylinder	1	
1	R83-6820SK		Seal Kit - Fits R83-6820 Cylinder	1	
1	R43-5260SK		Seal Kit - Fits Hyd Cylinder	1	
1	R68-9700SK		Seal Kit - Fits R68-9700 Cylinder	1	
1	R51-0120SK		Seal Kit - Fits R51-0120 Cylinder	1	
2	R76-0800	100-6131, 76-0800, 94-8178	Seal Kit - Hyd Wheel Motor	1	
2	R353-461	353-461	Seal Kit - Wheel Motor	2	
Othe	r Parts Available				
10	R84-8290	10-7900, 353-442, 353-443, 353-448, 353-449, 46-3690, 46-4890, 51-0120, 51-0130, 63-9500, 75-9880, 83-1250, 83-6820, 84-8290	Hydraulic Cylinder - Front	1	

All original equipment manufacturers names and part numbers are used for identification purposes only, and we are in no way implying that our products are original equipment parts. Prices subject to change without notice.





Traction Unit - Model 04345 Hydraulic Motor & Cylinder

10 R83-7000 27-2510, 43-5260, 68-9700, 83-7000 Hydraulic Cylinder 1 11 R10-8110 10-8110 Washer - Pivot Pin 0 12 R10-6060 10-6060, 120-3199, 140-5248 Pin - Pivot 3-7/8 Long 1 13 R10-8010 Hydraulic Motor 2 14 R27-1960 Hub - Engine 1 15 R27-1970 27-1970 Hub - Pump 1 16 R27-6600 27-6600 Spacer - Pump Coupling 4 17 R44-2230 27-6560, 44-2230, 27-6560, 42-2330, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 3241-1, 3241-2, 3241-1, 3241-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 Pad - Anti-Skid Foot Step 1 23 R62-2660 62-2660 Pad - Anti-Skid Foot Step 1		R&R Part No.	OEM Part No.	Description	Qty Order Req Quantity
12 R10-6060 10-6060, 120-3199, 140-5248 Pin - Pivot 3-7/8 Long 1 13 R10-8010 10-8010 Hydraulic Motor 2 14 R27-1960 110-5236, 27-1960 Hub - Engine 1 15 R27-1970 27-1970 Hub - Pump 1 16 R27-6600 27-6600 Spacer - Pump Coupling 4 17 R44-2230 27-6560, 44-2230, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 31-6770, 31-6770, 3241-1, 3241-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	10	R83-7000	43-5260, 68-9700,	Hydraulic Cylinder	1
12 R10-6060 120-3199, 140-5248 Pin - Pivot 3-7/8 Long 1 13 R10-8010 10-8010 Hydraulic Motor 2 14 R27-1960 110-5236, 27-1960 Hub - Engine 1 15 R27-1970 27-1970 Hub - Pump 1 16 R27-6600 27-6600 Spacer - Pump Coupling 4 17 R44-2230 27-6560, 44-2230, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 01-163-0100, 31-6770, 3241-1, 3241-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	11	R10-8110	10-8110	Washer - Pivot Pin	0
14 R27-1960 110-5236, 27-1960 Hub - Engine 1 15 R27-1970 27-1970 Hub - Pump 1 16 R27-6600 27-6600 Spacer - Pump Coupling 4 17 R44-2230 27-6560, 42-230, 27-6560, 44-2230, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 01-163-0100, 31-6770, 32-41-1, 32-41-1, 32-41-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	12	R10-6060	120-3199,	Pin - Pivot 3-7/8 Long	1
27-1960 Hub - Engine 1 15 R27-1970 27-1970 Hub - Pump 1 16 R27-6600 27-6600 Spacer - Pump Coupling 4 115-4523, 27-6560, 44-2230, 80-8650 17 R44-2230 01-163-0100, 31-6770, 3241-1, 3241-2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 5/8 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 66-004-3221, 85-9020 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	13	R10-8010	10-8010	Hydraulic Motor	2
16 R27-6600 27-6600 Spacer - Pump Coupling 4 17 R44-2230 27-6560, 44-2230, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 01-163-0100, 31-6770, 3241-1, 3241-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 Pad - Anti-Skid Foot Step 1	14	R27-1960		Hub - Engine	1
17 R44-2230 115-4523, 27-6560, 44-2230, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 01-163-0100, 31-6770, 3241-1, 3241-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 10-7070, 48-004-1931, 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	15	R27-1970	27-1970	Hub - Pump	1
17 R44-2230 27-6560, 44-2230, 80-8650 Coupling - Rubber - Pump 1 18 R3241-2 01-163-0100, 31-6770, 3241-1, 3241-2 2 19 R3241-6 Screw - Set Sq. HD. 1/4 x 5/8 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 62-3380, 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	16	R27-6600	27-6600	Spacer - Pump Coupling	4
18 R3241-2 31-6770, 3241-1, 3241-2 Screw - Set Sq. HD. 1/4 x 5/8 2 19 R3241-6 3241-6 Screw - Set Sq. HD. 1/4 x 3/4 2 20 R463009 5-0946 Key - Spindle Shaft 1 21 R1164 10-7070, 48-004-1931, 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	17	R44-2230	27-6560, 44-2230,	Coupling - Rubber - Pump	1
20 R463009 5-0946 Key - Spindle Shaft 1 10-7070, 48-004-1931, 62-3380, 66-004-3221, 85-9020 10-8200 Pad - Anti-Skid Foot Step 1	18	R3241-2	31-6770, 3241-1,	Screw - Set Sq.HD. 1/4 x 5/8	2
10-7070, 48-004-1931, 62-3380, 66-004-3221, 85-9020 R10-8200 Reg - 1/4 x 1/4 x 1 1 22 R10-8200 Pad - Anti-Skid Foot Step 1	19	R3241-6	3241-6	Screw - Set Sq. HD. 1/4 x3/4	2
21 R1164 48-004-1931, 62-3380, 66-004-3221, 85-9020 Key - 1/4 x 1/4 x 1 1 22 R10-8200 10-8200 Pad - Anti-Skid Foot Step 1	20	R463009	5-0946	Key - Spindle Shaft	1
	21	R1164	48-004-1931, 62-3380, 66-004-3221,	Key - 1/4 x 1/4 x 1	1
23 R62-2660 62-2660 Pad - Anti-Skid Foot Step 1	22	R10-8200	10-8200	Pad - Anti-Skid Foot Step	1
	23	R62-2660	62-2660	Pad - Anti-Skid Foot Step	1

All original equipment manufacturers names and part numbers are used for identification purposes only, and we are in no way implying that our products are original equipment parts. Prices subject to change without notice.





Traction Unit - Model 04345 Hydraulic Motor & Cylinder

Item R&R No Part No.	OEM Part No.	Description	Qty Order Req Quantity
24 R10-8220	10-8220	Pad - Anti-Skid Tool Box	1
25 R49-6120	10-8210, 49-6120	Pad - Anti-Skid Foot Rest	1