



Anchor - Flex Black

RP402



Details

It is important to use the Driving Tool to penetrate the ground before installing the flexible stakes or the anchor surface rings. This prevents damage in hard ground and makes installation fast and simple. Anchors allow stakes to be easily removed and replaced in their same location and direction and increases the life span of the stake.

- Makes installation of Flexstakes quick and easy
- Preserves life of Flexstakes

Specifications

Manufacturer

Flexstake

Japan Equipment

123 Main St. Apartment 12 Tokyo, 100-0001
987-456-3210

<https://japan.rrproducts.com/>